




# *LAM for UGM*

## CONTACT BADGE READER

### WIRING INSTRUCTION

Contact badge Reader (back view)

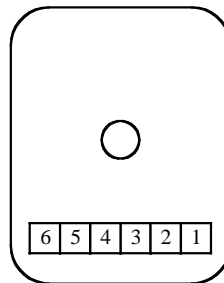

W I R I N G   D I A G R A M

Wiring between the reader and the reader controller:

READER	READER CONTROLLER
Terminal 1	Terminal 1
Terminal 2	Terminal 2
Terminal 4	Terminal 4
Terminal 5	Terminal 5
Terminal 6	Terminal 6