




LIM for UGM

INFRARED READER

WIRING

WIRING DIAGRAM

Infrared reader :

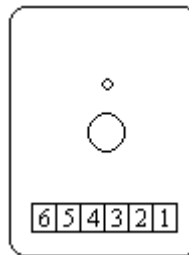

1. Connection to the reader controller :

Antenna	Reader controller terminals
1	n° 1 on the 3 points terminal
2	n° 2 on the 3 points terminal
3	n° 3 on the 3 points terminal
4	n° 4 on the 3 points terminal
5	n° 5 on the 3 points terminal
6	n° 6 on the 3 points terminal